BEST AVAILABLE COPY

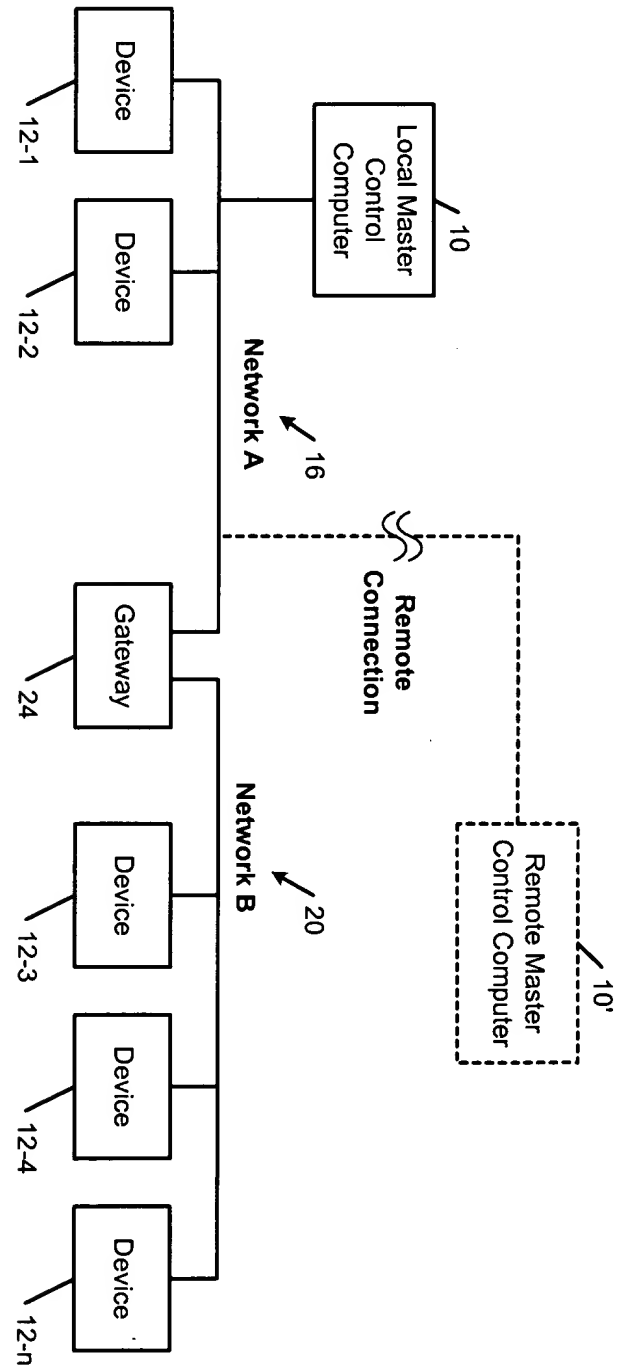

FIG. 1

EL600870425US

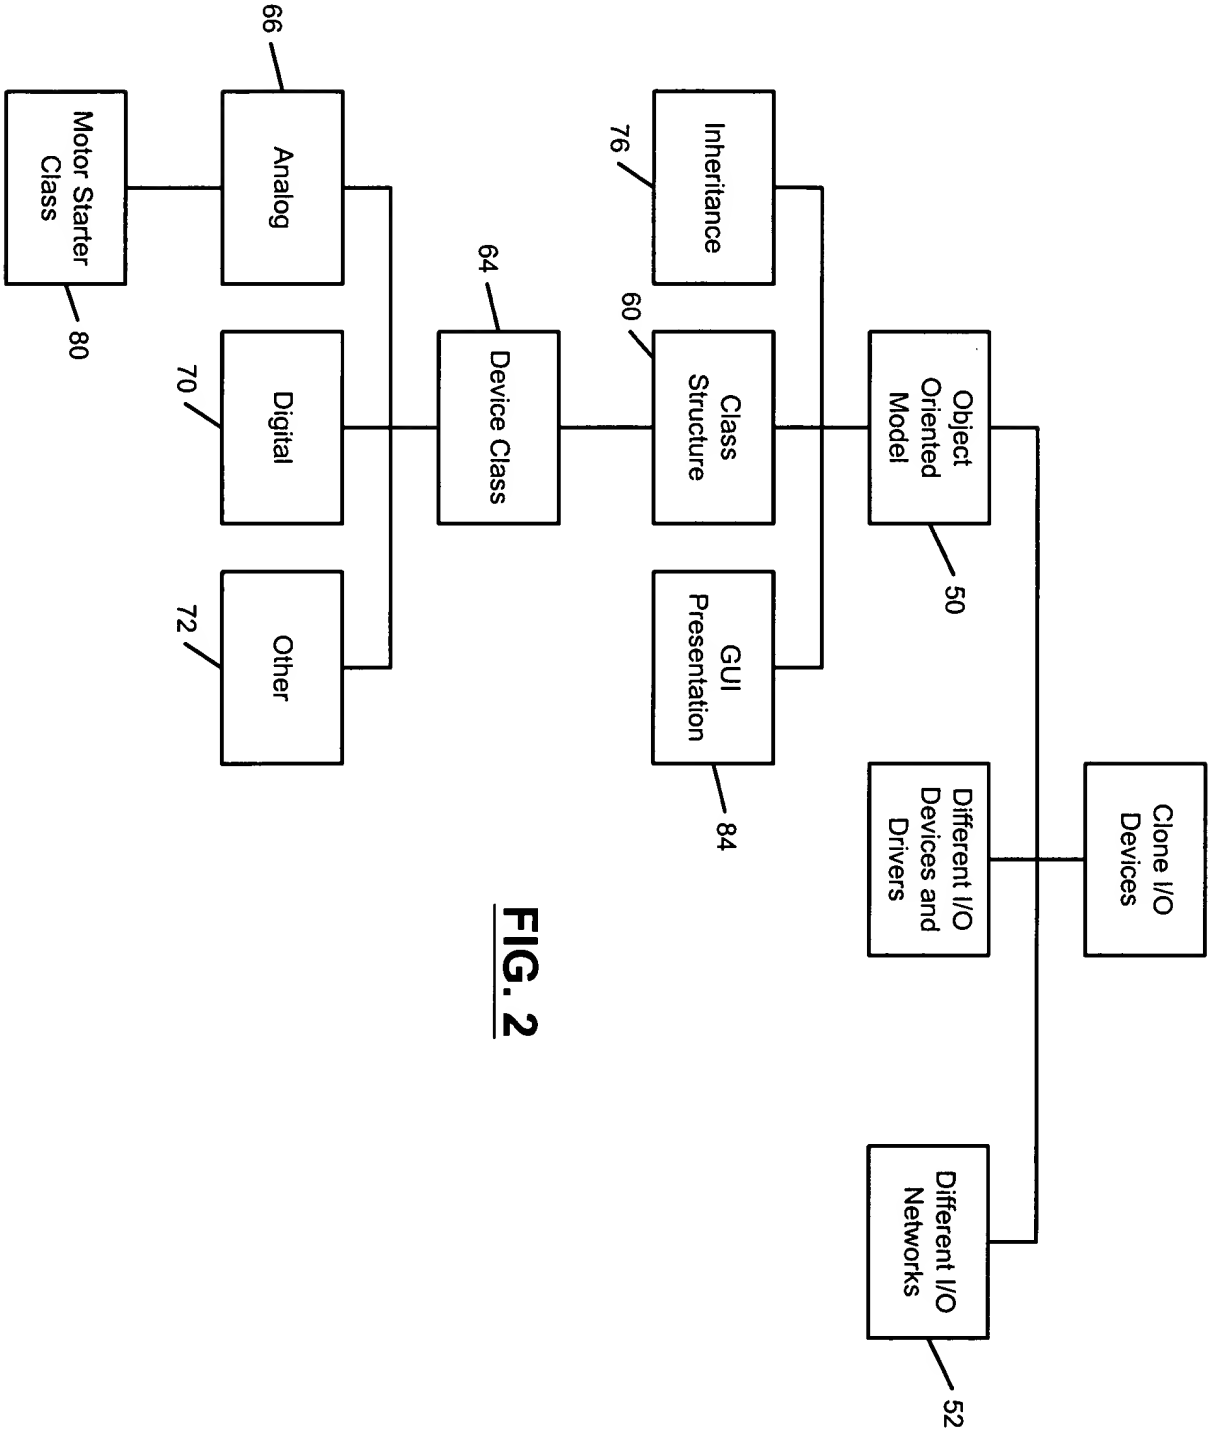
Clone I/O Devices
Different I/O Devices and Drivers
Different I/O Networks
52
Object Oriented Model
50
Class Structure
60
GUI Presentation
84
Inheritance
76
Device Class
64
Analog
66
Digital
70
Other
72
Motor Starter Class
80

FIG. 2

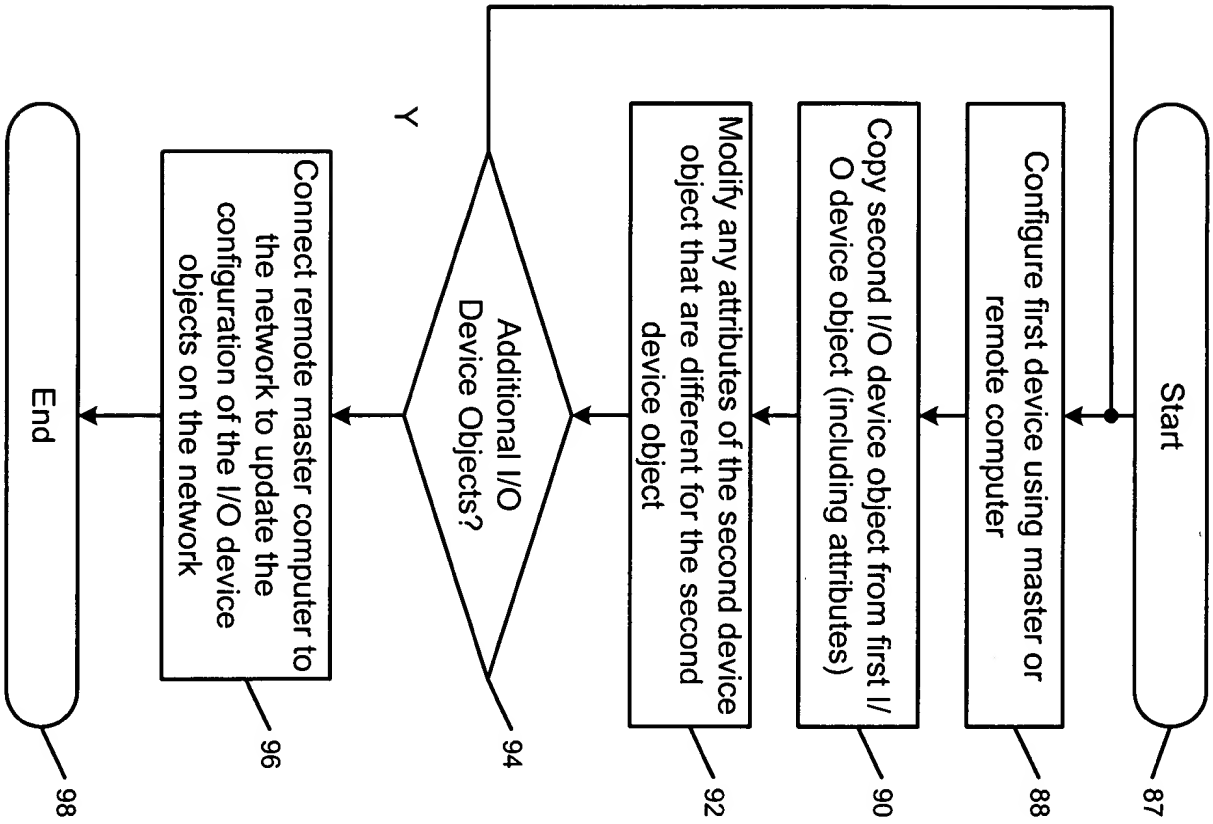
Start
87
Configure first device using master or remote computer
88
Copy second I/O device object from first I/O device object (including attributes)
90
Modify any attributes of the second device object that are different for the second device object
92
Additional I/O Device Objects?
94
Y
Connect remote master computer to the network to update the configuration of the I/O device objects on the network
96
End
98
86

FIG. 3

Fig. 4

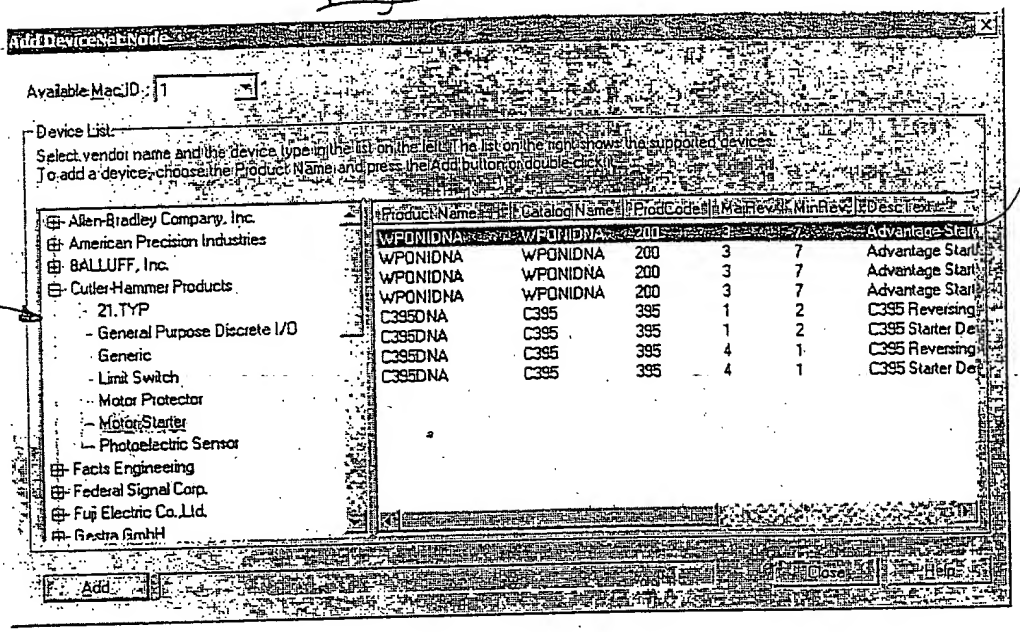

Using above dialog user adds a new device. Then select the device and go to the configure parameter dialog as displayed below.

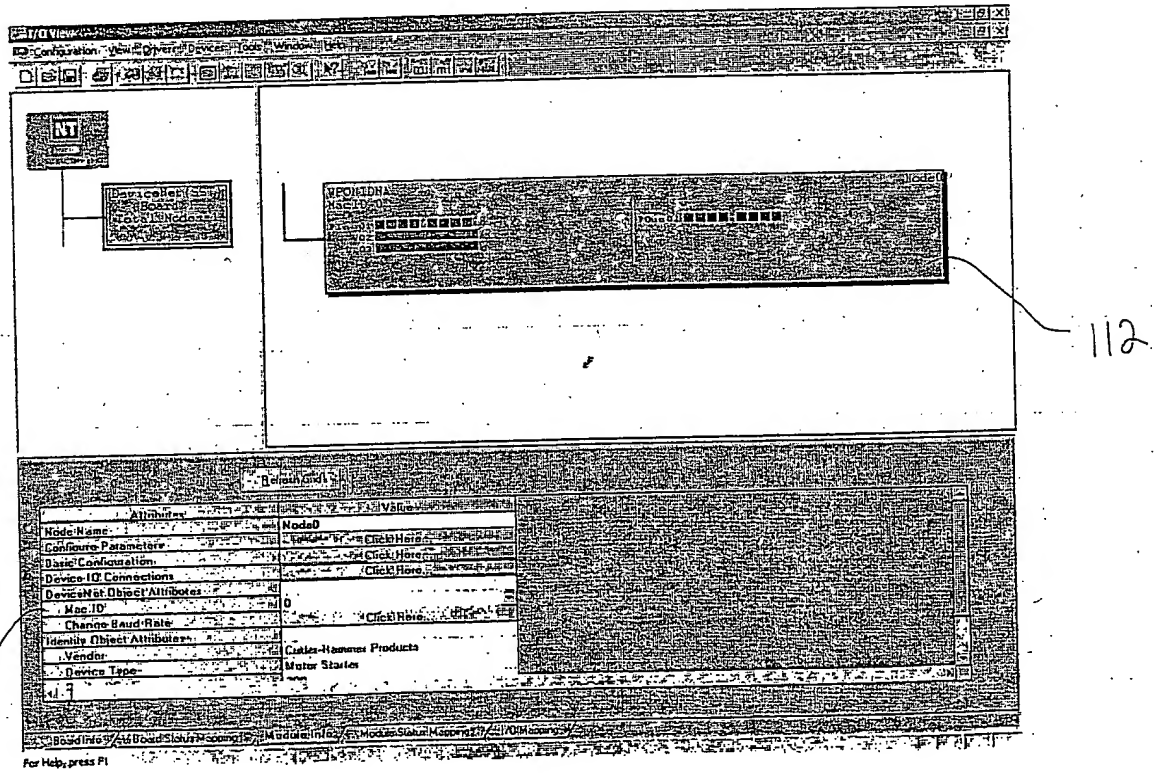

Fig. 5

Fig. 6

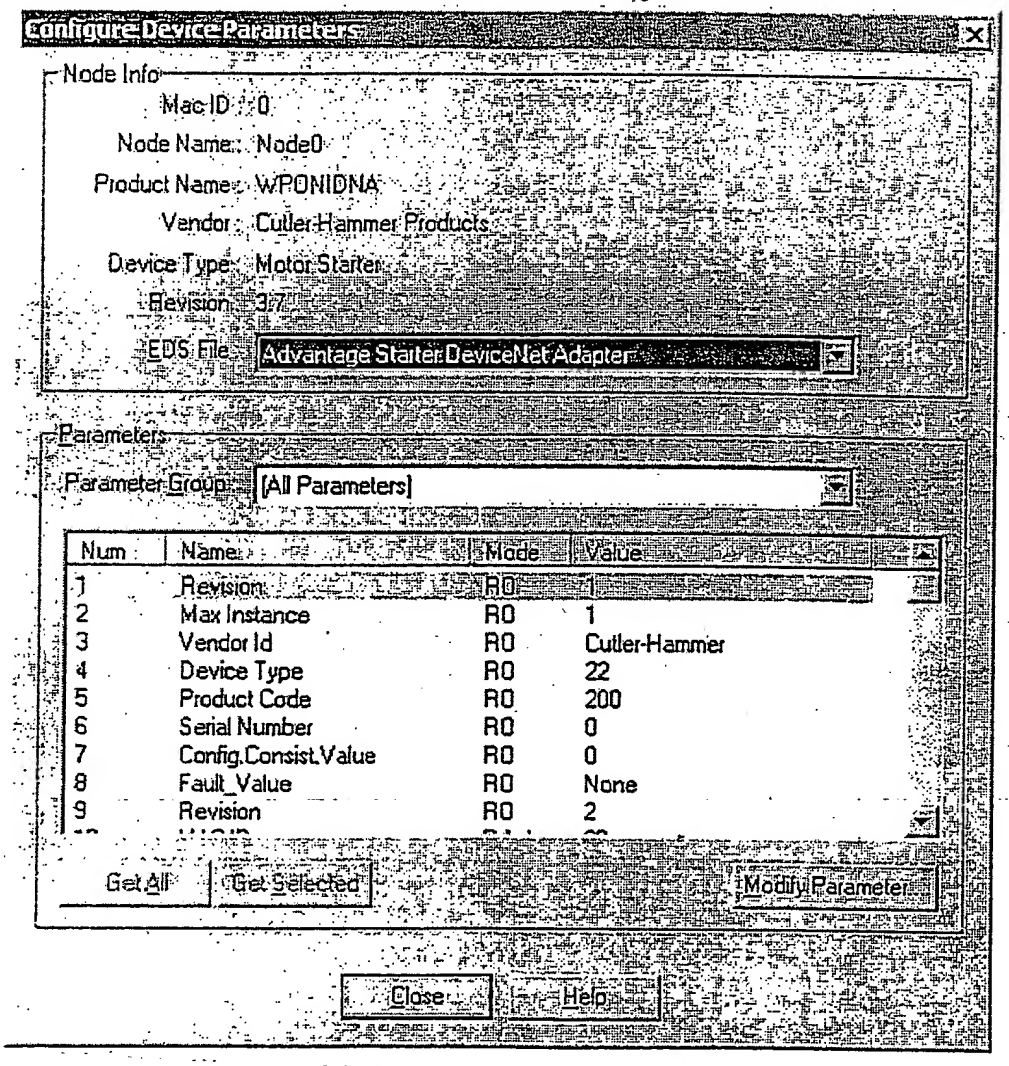
Configure Device Parameters
Node Info
Mac ID : 0
Node Name: Node0
Product Name: WPONIDNA
Vendor : Cutler-Hammer Products
Device Type: Motor Starter
Revision: 3.7
EDS File: Advantage Starter DeviceNet Adapter
Parameters
Parameter Group: [All Parameters]
Num
Name
Mode
Value
1 Revision RO 1
2 Max Instance RO 1
3 Vendor Id RO Cutler-Hammer
4 Device Type RO 22
5 Product Code RO 200
6 Serial Number RO 0
7 Config.Consist.Value RO 0
8 Fault_Value RO None
9 Revision RO 2
Get All
Get Selected
Modify Parameter
Close
Help

T0608D-76526501

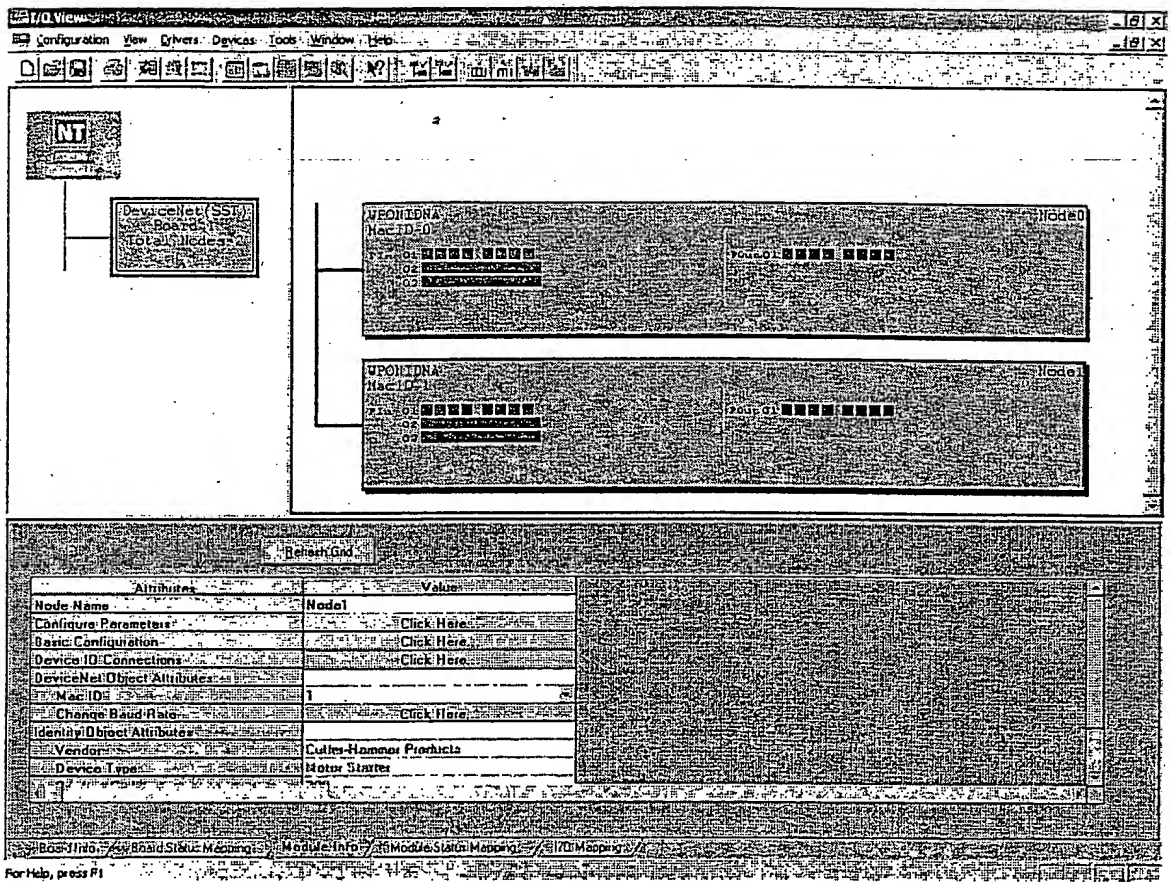

Fig. 7

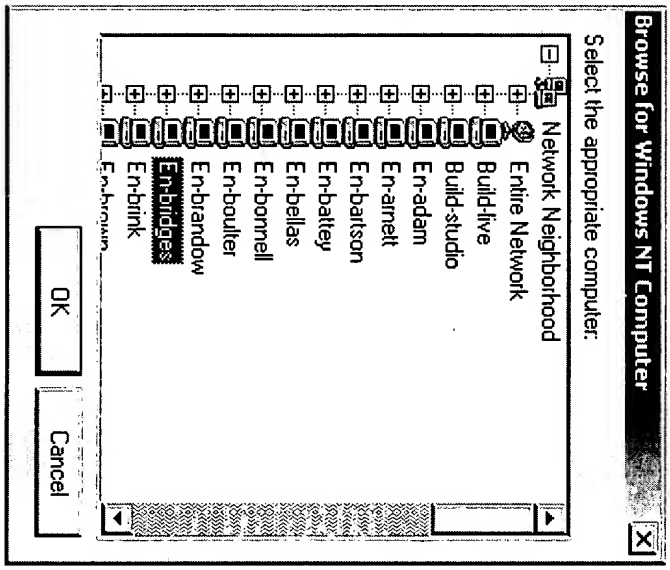

FIG. 8

10080 "25360

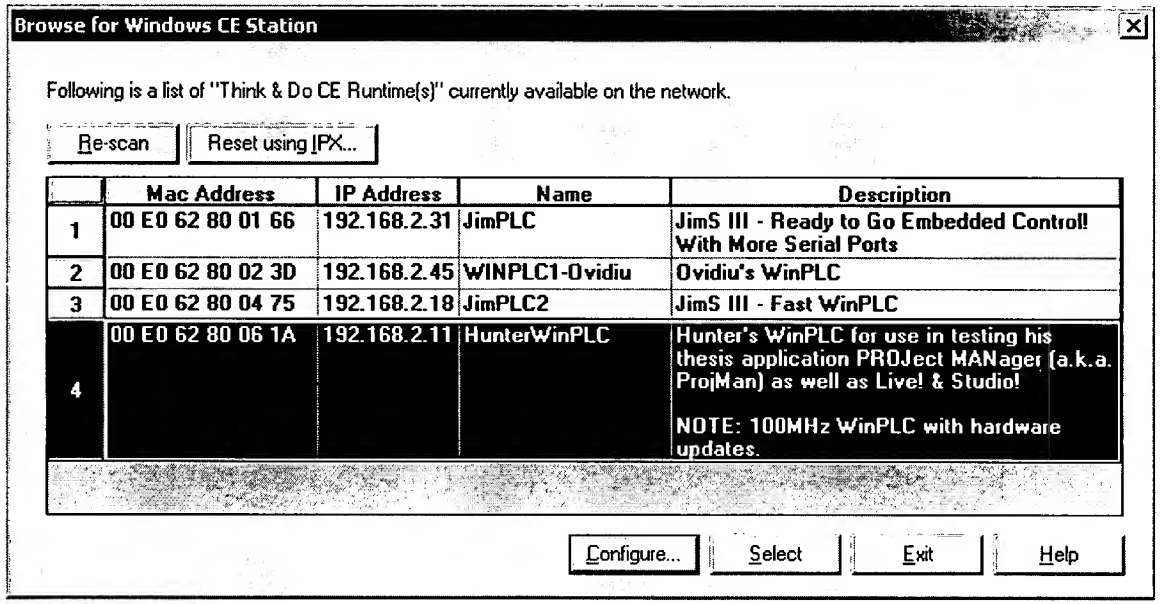
Browse for Windows CE Station
Following is a list of "Think & Do CE Runtime(s)" currently available on the network.
Re-scan
Reset using IPX...
Mac Address
IP Address
Name
Description
1
00 E0 62 80 01 66
192.168.2.31
JimPLC
JimS III - Ready to Go Embedded Control! With More Serial Ports
2
00 E0 62 80 02 3D
192.168.2.45
WINPLC1-Ovidiu
Ovidiu's WinPLC
3
00 E0 62 80 04 75
192.168.2.18
JimPLC2
JimS III - Fast WinPLC
4
00 E0 62 80 06 1A
192.168.2.11
HunterWinPLC
Hunter's WinPLC for use in testing his thesis application PROJect MANager (a.k.a. ProjMan) as well as Live! & Studio!
NOTE: 100MHz WinPLC with hardware updates.
Configure...
Select
Exit
Help

FIG. 9

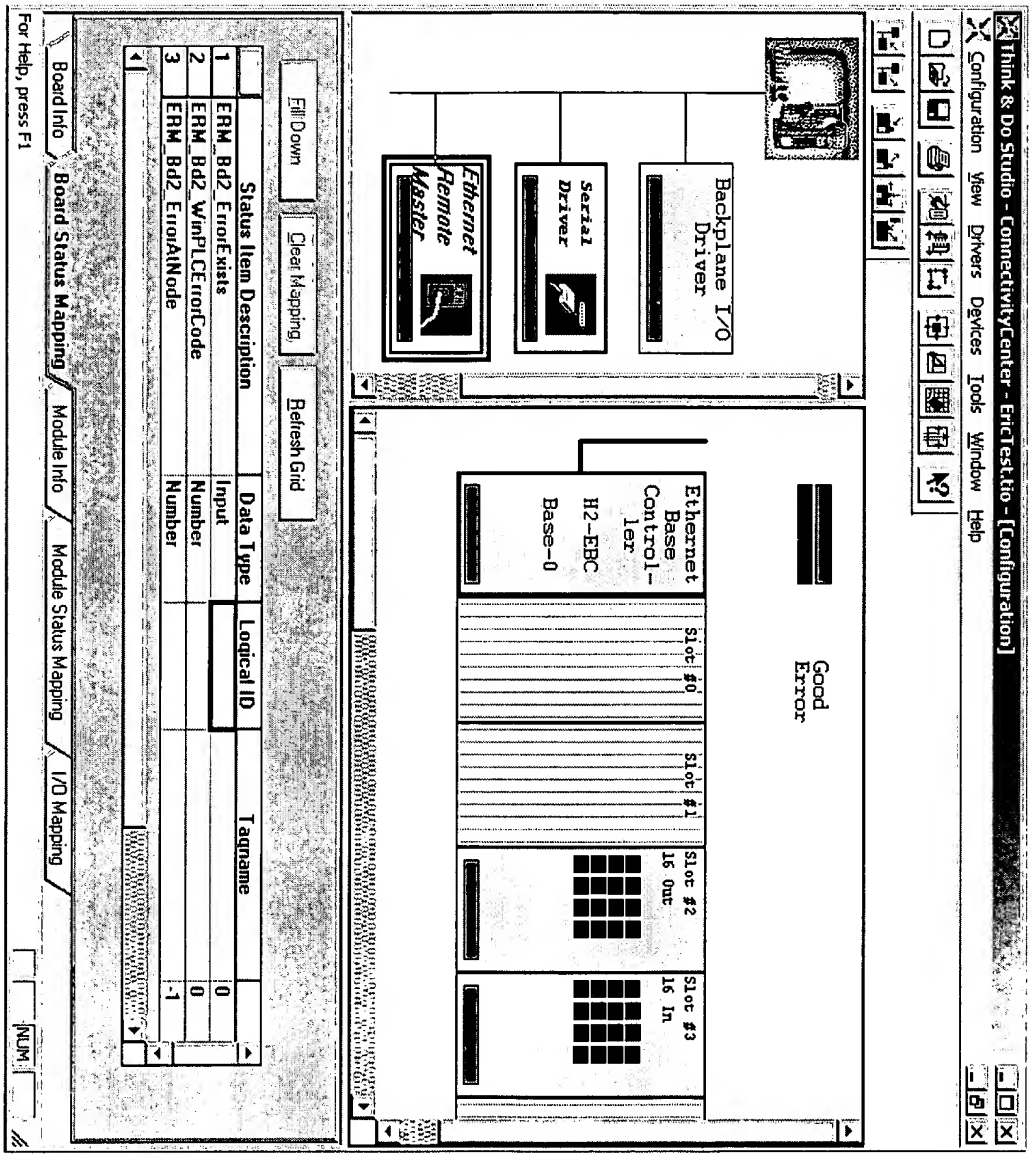
Think & Do Studio - ConnectivityCenter - EricTest.tio - [Configuration]
Configuration View Drivers Devices Tools Window Help
Backplane I/O Driver
Serial Driver
Ethernet Remote Master
Good
Error
Ethernet Base Controller H2-EBC Base-0
Slot #0
Slot #1
Slot #2
16 Out
Slot #3
16 In
Fill Down
Clear Mapping
Refresh Grid
Status Item Description
Data Type
Logical ID
Tagname
1 ERM_Bd2_ErrorExists Input 0
2 ERM_Bd2_WinPLCErrorCode Number 0
3 ERM_Bd2_ErrorAtNode Number -1
Board Info
Board Status Mapping
Module Info
Module Status Mapping
I/O Mapping
For Help, press F1
NUM

FIG. 10

This Page is Inserted by IFW Indexing and Scanning Operations and is not part of the Official Record

BEST AVAILABLE IMAGES

Defective images within this document are accurate representations of the original documents submitted by the applicant.

Defects in the images include but are not limited to the items checked:

- ☐ BLACK BORDERS
- ☐ IMAGE CUT OFF AT TOP, BOTTOM OR SIDES
- ☐ FADED TEXT OR DRAWING
- ☒ BLURRED OR ILLEGIBLE TEXT OR DRAWING
- ☐ SKEWED/SLANTED IMAGES
- ☐ COLOR OR BLACK AND WHITE PHOTOGRAPHS
- ☐ GRAY SCALE DOCUMENTS
- ☐ LINES OR MARKS ON ORIGINAL DOCUMENT
- ☐ REFERENCE(S) OR EXHIBIT(S) SUBMITTED ARE POOR QUALITY
- ☐ OTHER: _____

IMAGES ARE BEST AVAILABLE COPY.
As rescanning these documents will not correct the image problems checked, please do not report these problems to the IFW Image Problem Mailbox.